


Installation

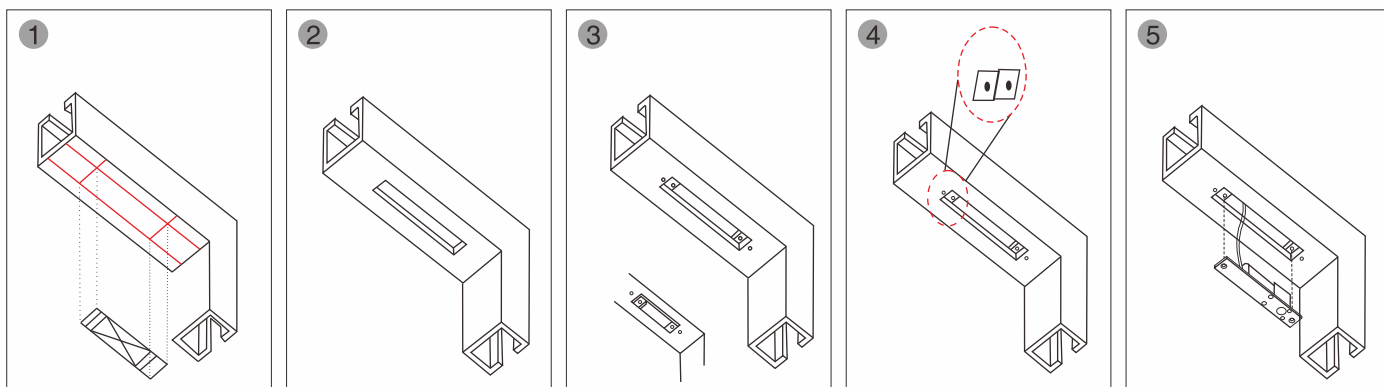


Place lock body template to match with door frame center line

Cut hole

Fix mounting plate (For hollow metal frame)

Connect wires

Mount lock body on the door frame and test

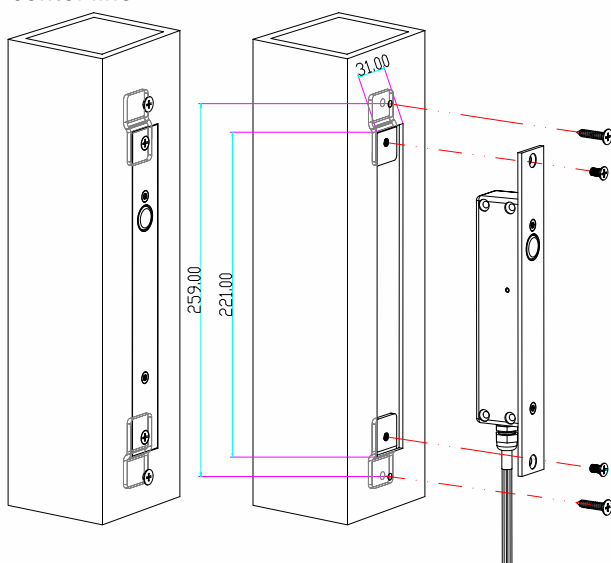


Wiring diagram

	Red		+	
	Black		-	
	Green		NO	Door signal
	White		COM	
	Blue		NO	Lock signal
	Orange		NC	
	Yellow		COM	

Installation Schematic



surface mount

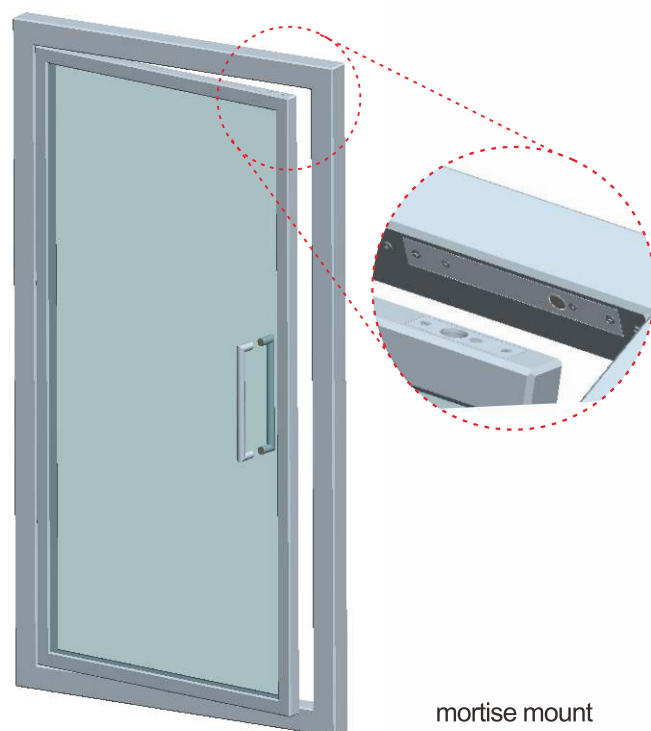

mortise mount